


FINGERRPINT CABINET LOCK

USER MANUAL

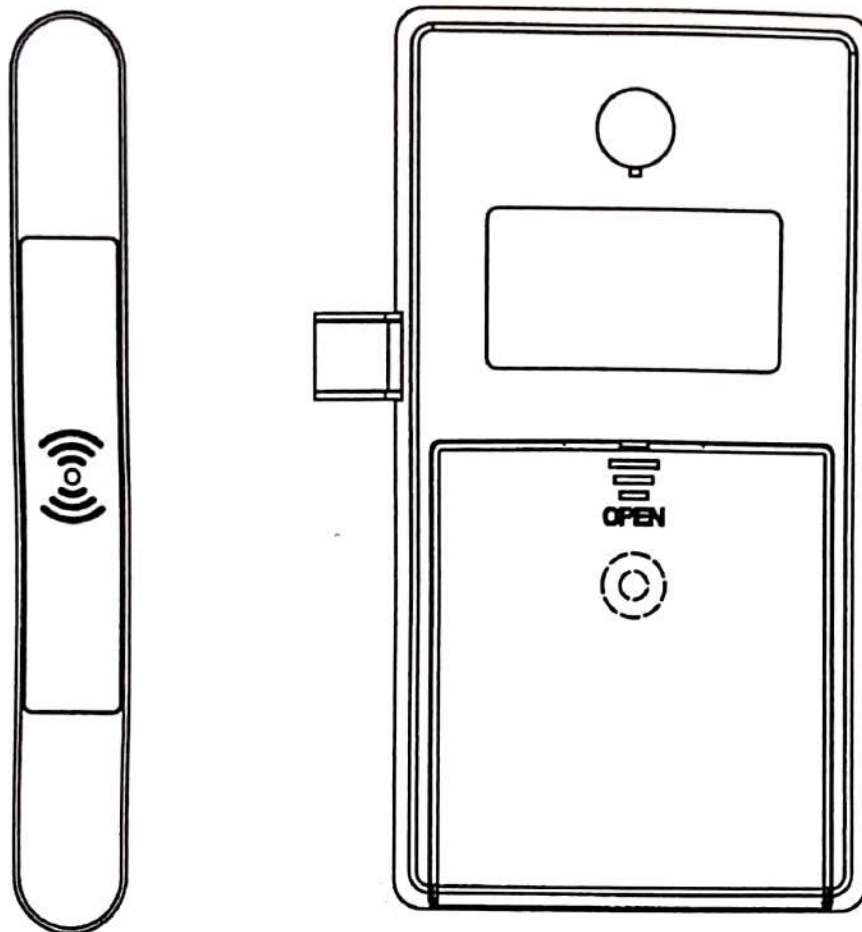

Feature

1. Biometric sensor, high sensitive and rapid responsive
2. Aluminium alloy panel with elegant design
3. surface mounted, widely used in drawer, cabinet, wardrobe etc.

Instructions for use

1. Function introduction of each card

- (1) Management card: Register the door opening card and waiter card for emergency unlocking. Delete the door card and waiter card, change the unlock mode.
 - (2) Door opening card: unlock.
 - (3) Attendant card: In the double-door mode, it can be unlocked together with the door-opening card.
-

2. Product initialization

Press and hold the initialization button on the rear lock body for 2 seconds and release it after hearing a "beep" to enter the single-door mode. If you don't release it, continue to press the initialization button for 2 seconds and then release it for the double-door mode after the second ringtone "Duo Lai Mi" rings. Open door mode. The default factory is single door mode.

Single door opening mode: the door opening card opens the door independently.

Double door mode: the door card and the waiter card are combined to open the door.

3. Single mode

- (1) Set up the management card (1 piece): In the initialization state, swipe the first card and make a long beep to complete the entry.
- (2) Set the door opening card (1-15 cards): Swipe the management card once and the light flashes to start card entry. After a long beep, the entry is completed, and the blue light continues to flash, and you can continue to swipe the card to enter. If it has been entered Finished, wait for 6 seconds to exit automatically. If the card has already been entered, if you swipe it again, "Mi Duo Lai" will sound, and the card will be deleted.
- (3) Unlocking: Swipe the management card or the door opening card, make a long beep, the blue light is on, and the lock is opened, and after 4 seconds, the blue light is off, and the lock is automatically locked. If the card is not entered, there will be two beeps, indicating that the unlocking failed.

4. Double mode

- (1) Set up the management card (1 piece): In the initialization state, swipe the first card and make a long beep to complete the recording.
- (2) Set the door-opening card (1 card): Swipe the management card for one beep, and then the light flashes to start the card entry, and the entry is completed after a long beep. Repeated operation of the new card will become the door opening card, and the old card will be automatically deleted.
- (3) Set waiter cards (1-14). Swipe the management card once with a "di" sound, and the blue light flashes. Swipe the management card again to make a "duo lai mi" sound, and start to swipe the card to enter. After a long "di", the entry is completed, and the blue light continues to flash, and you can continue to swipe the card to enter. After entering, wait for 6 seconds to exit automatically. When unlocking,
- (4) Unlocking: the waiter card and the door opening card are entered in no particular order. Swipe the waiter card or door opening card, after one beep, the blue light flashes, then swipe the door card or waiter card, make a long beep, the blue light is on, the lock is opened, after 4 seconds, the blue light is off, and the lock is automatically locked. If the card is not entered, there will be two beeps, indicating that the unlocking failed.
-

5. Change the door opening mode (delete the door opening card and waiter card)



After swiping the management card with one beep, stay in the card swiping area for 4 seconds, a long beep sounds, the mode is single door opening mode, and the guest card and waiter card are deleted. If the single door mode is set, remove the management card immediately. If the double-door mode is set, after staying in the card swiping area for 3 seconds, "Duo Lai Mi" will sound, and the mode will be changed to double-door mode, and the guest card and waiter card will be deleted.

6. Low battery alarm

After unlocking, there will be 8 consecutive beeps, indicating that the battery power is too low, please replace the battery in time.


Installation Instructions

1. Put the installation drawing on the door, approx. 48mm between the door frame and center hole (Picture 1), then drill the hole

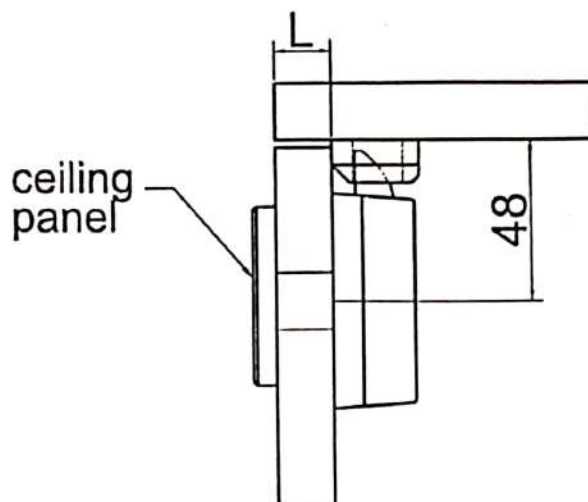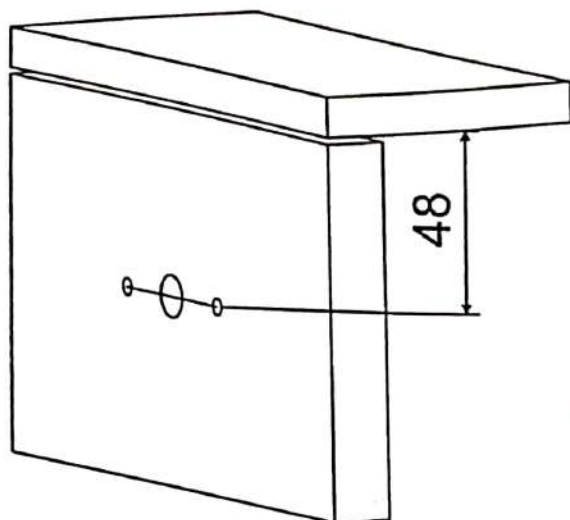


Picture 1


wire connection

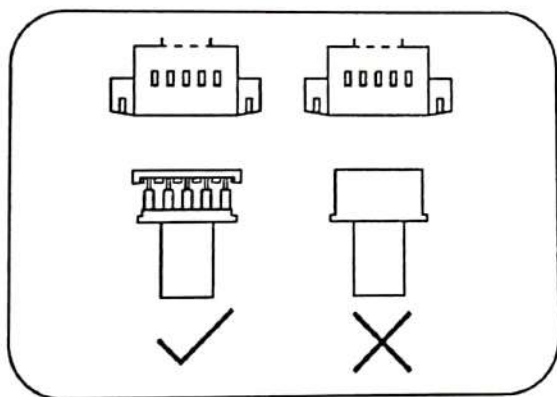


2. Wire goes through the center hole and fix the front panel by screw M4X25 , then connect the back lock, (Tide up the wire not crush), fix back lock by screw ST3.5X18

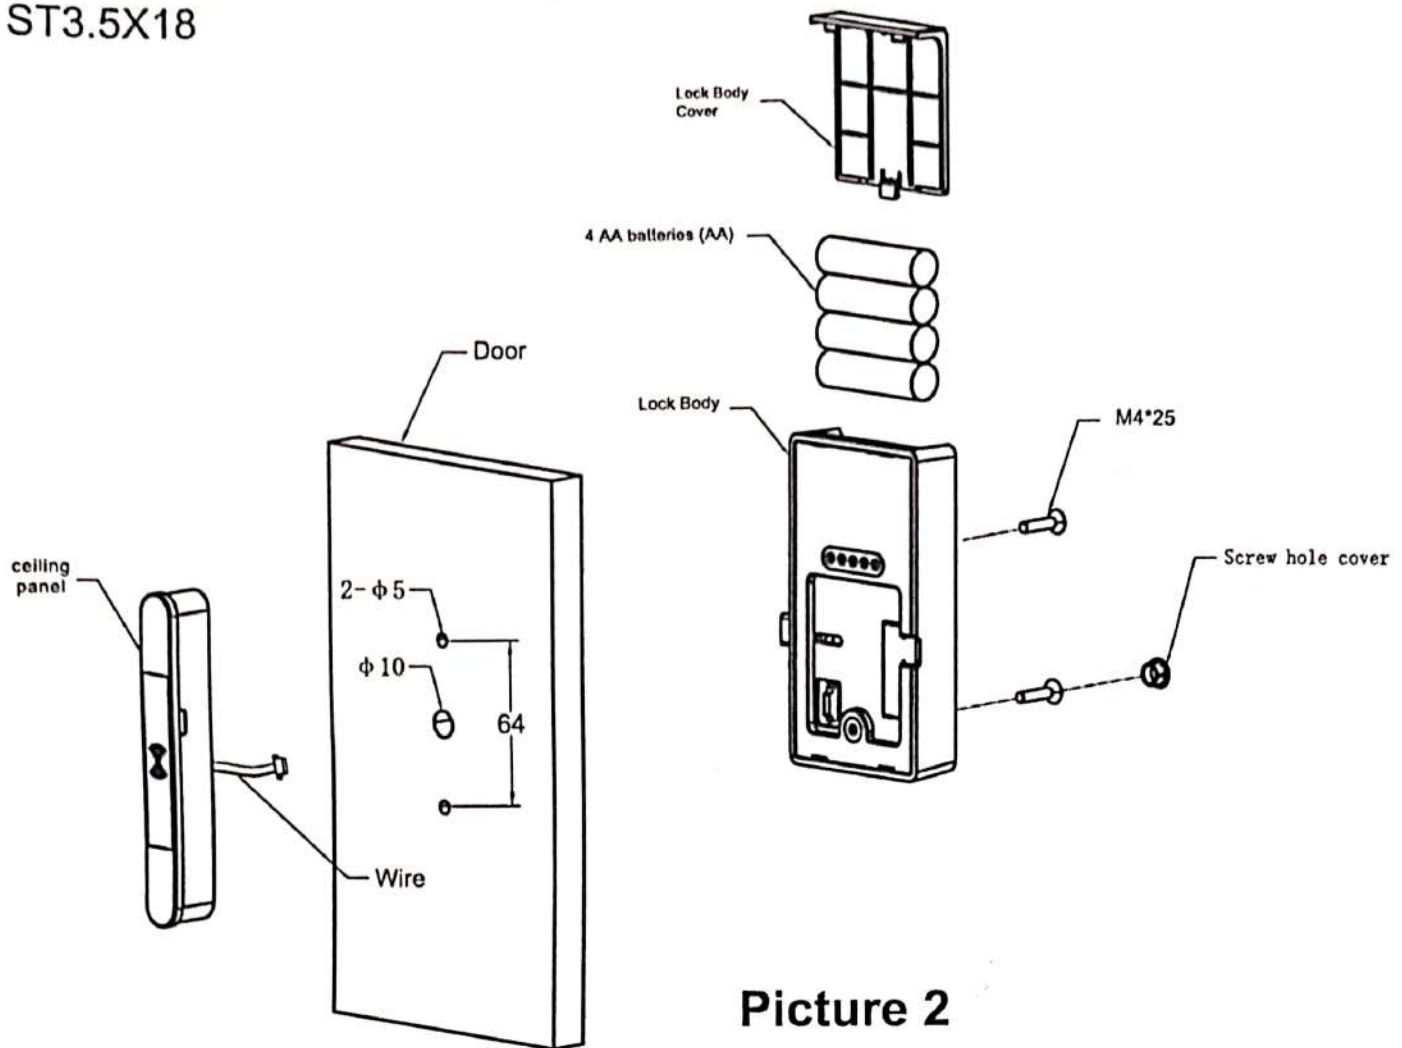


3. Fix the striking plate by screw ST3.5X18(Make sure latch works well)

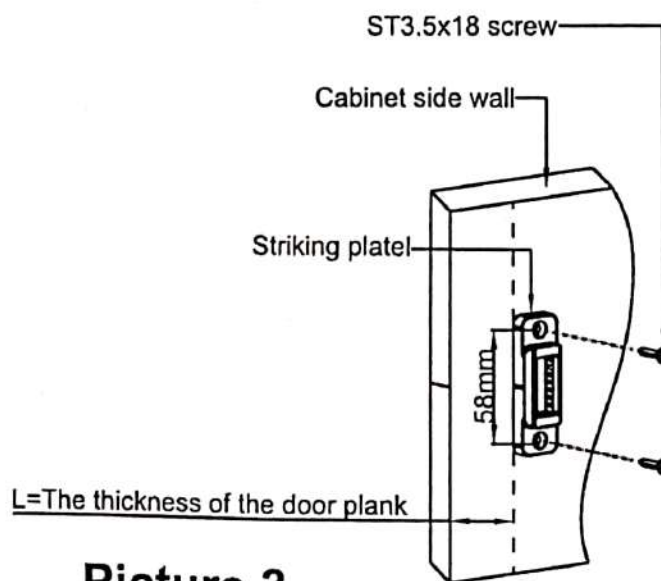

COMPONENT

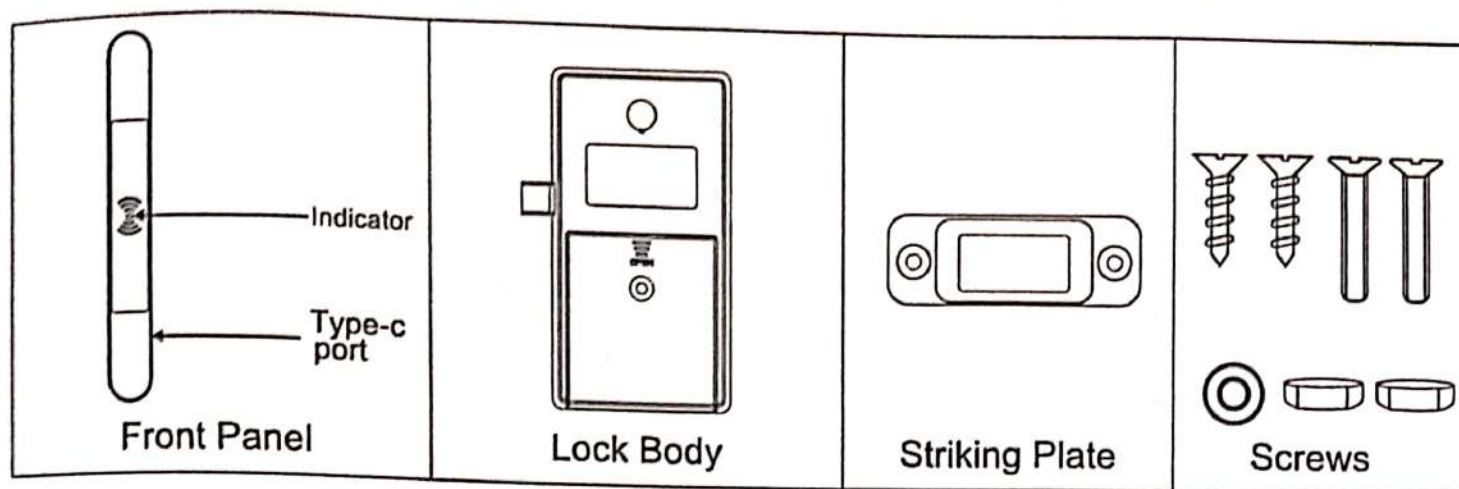

INSTALLATION DRAWING

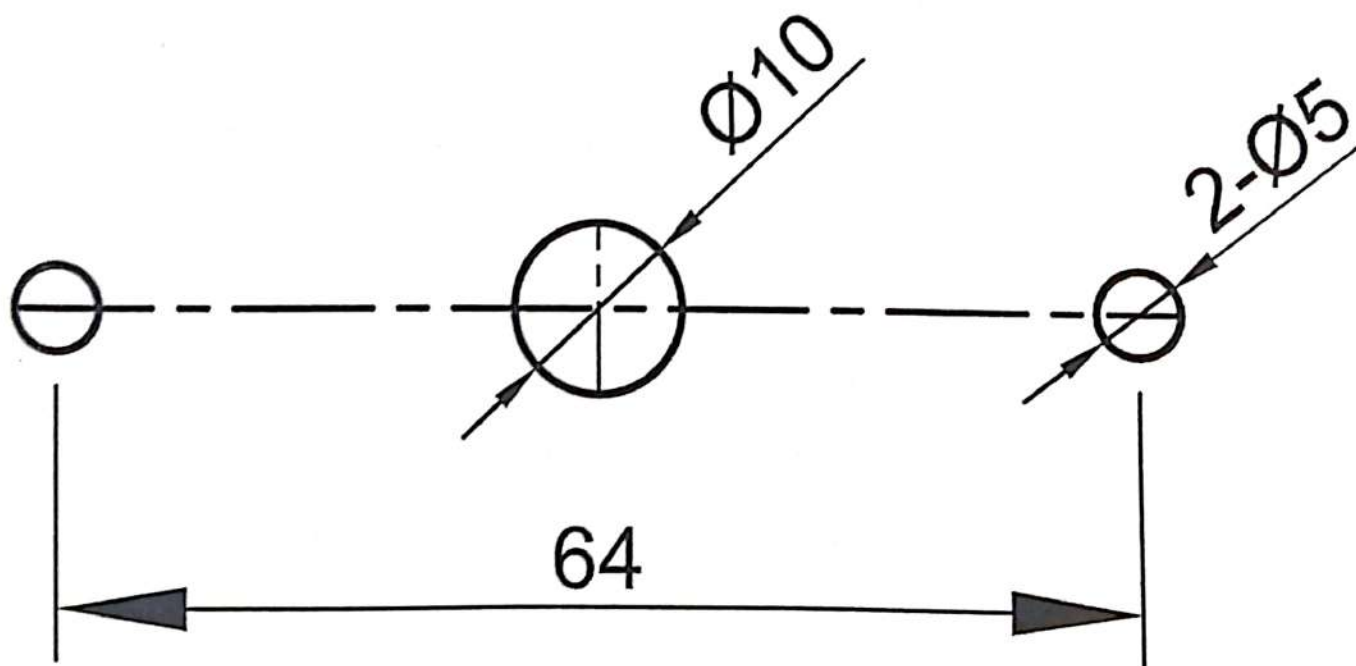

Follow the drawing to drill the hole