

Accessories	Qty	Accessories	Qty
 Left upper roller	1	 Right upper roller	1
 Left down roller	1	 Right down roller	1
 T902 Plastic hinge	4	 Position template	1
 8mm Spanner	1	 Damper	2
 2mm Allen key	1	 ST4*16 Wood screw	46

1. Installation Dimension



Single door width: 300-600mm;
Single door loading capacity: 20kgs; Single door thickness: ≥ 16 mm

Door height $h = H_2 + H + 55$

H = Door's height - top panel's height


Door width $W = \frac{L - 2n + 2}{4}$ n = door's quantity

Side panel $F = 18$ mm

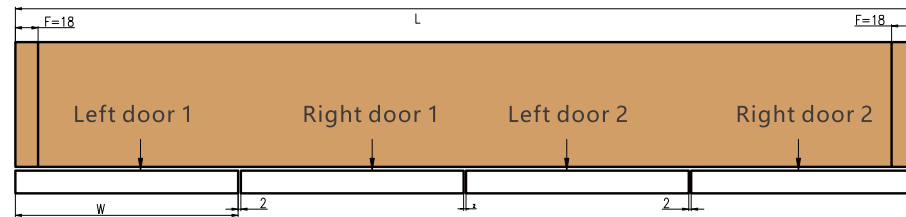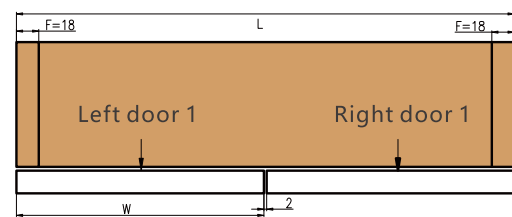


2. Door Preparation - Drilling Dimension



Hole A: plastic hinge hole, with dia 2.5 mm and depth 0-2 mm
Hole B: steel hinge hole, with dia 35 mm and depth 12 mm

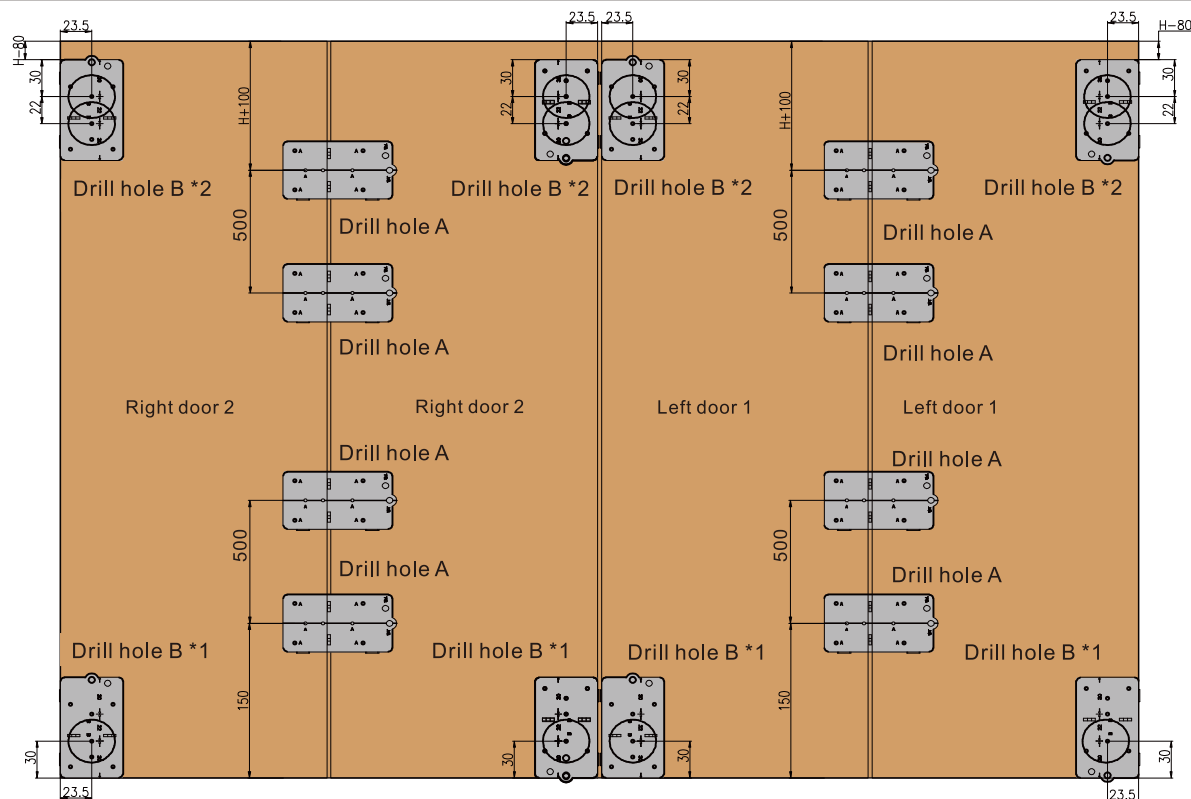


Upper Rail

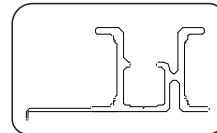

Down Rail

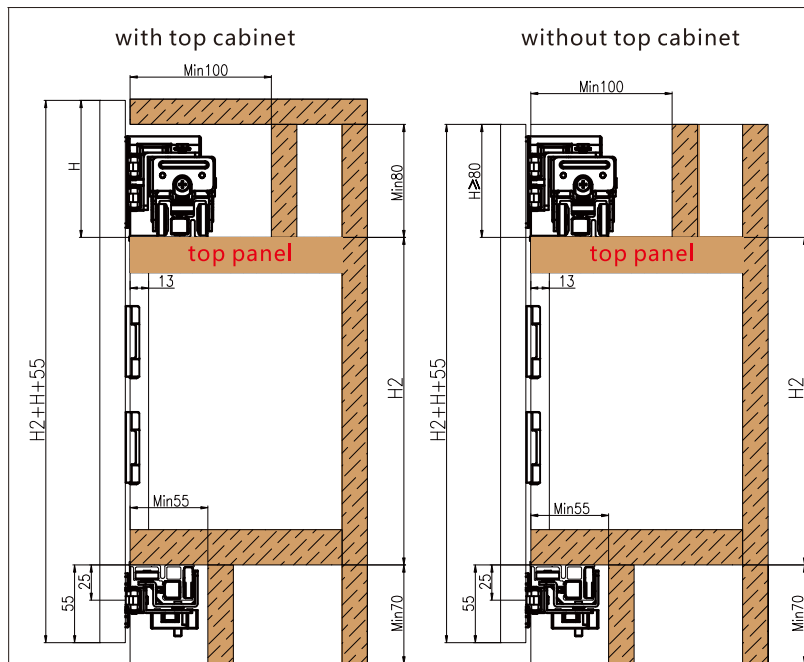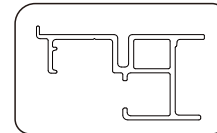


3. Separate the rollers

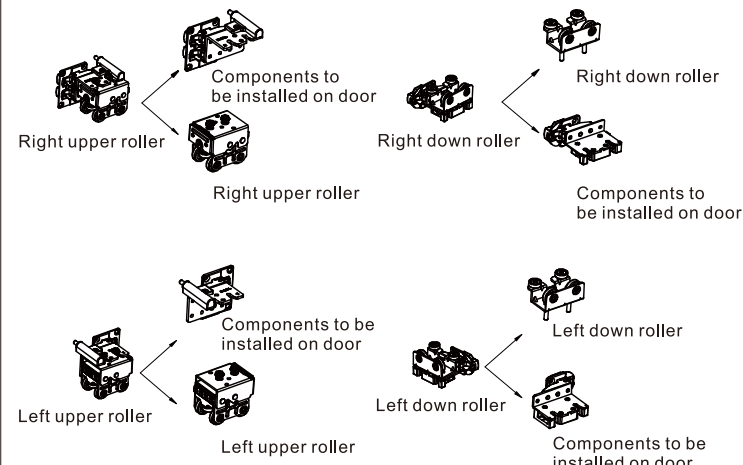


4. Install accessories


All plastic hinges should be of same direction
The plastic hinges with 5 screws should be in the middle of each door.

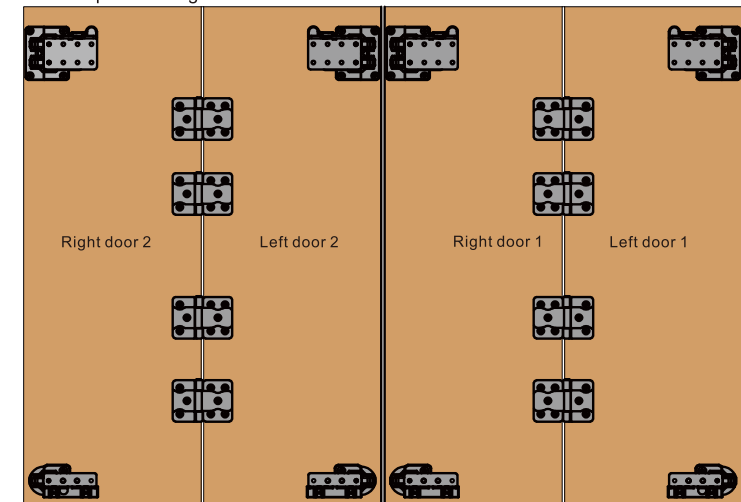


5. Drill holes of dia 5 for upper & down rail

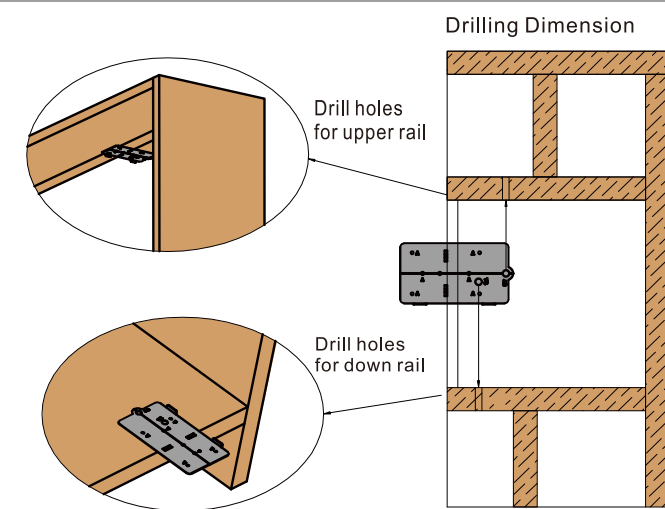


6. Install upper, down rail and accessories (mind the accessories direction)

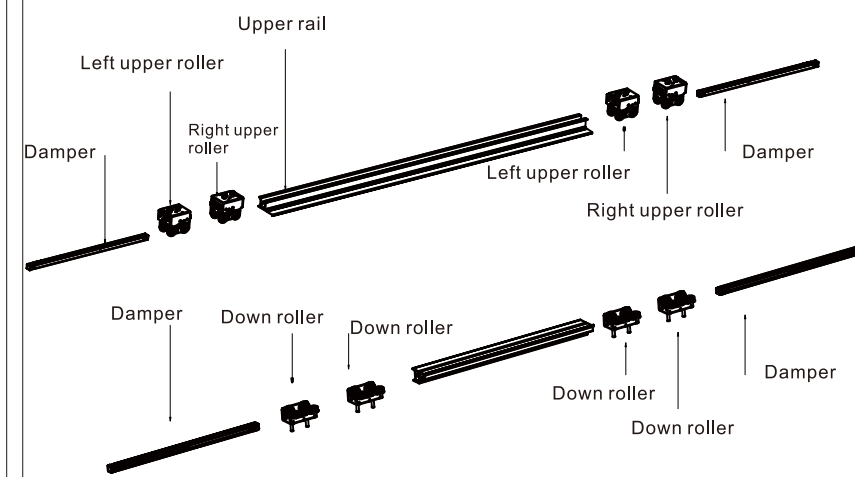


7. Fix upper rail and down rail

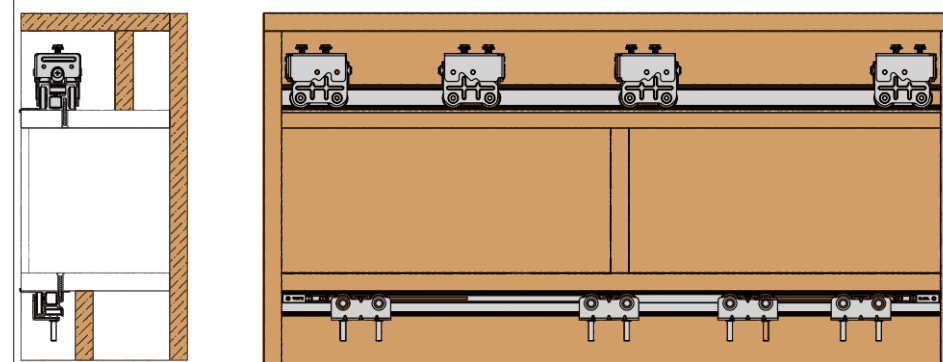


8. Install door and tighten screws

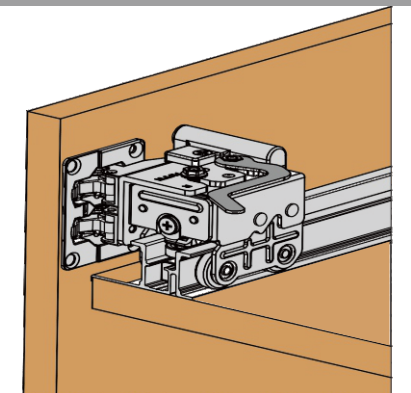

9. Lock down roller

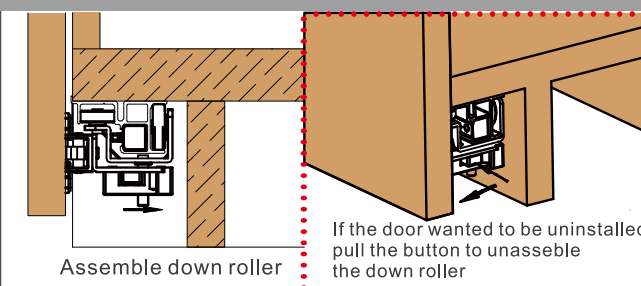

10. Door adjustment

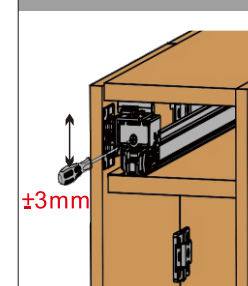

11. Install dampers

