




Installation instruction for WB1205S

1	Basket	As following table	6		1 pcs
2		As following table	7		1 pcs
3		1 pcs	8		ST4 x 16 30 pcs
4		2 pcs	9		ST 5 x 20 6 pcs
5		1 pcs	10		ST4 x 40 2 pcs


Item No.	quantity of basket	"W"	"H"	
WB1205S.015E	6 pcs	150	1970-2270	12 pcs
WB1205S.020E		200		
WB1205S.025E		250		
WB1205S.030E		300		
WB1205S.040E		400		
WB1205S.015D	5 pcs	150	WB1205S.015D (1650-1950) WB1205S.015D1 (1770-2070) WB1205S.015D2 (1570-1870)	10 pcs
WB1205S.020D		200		
WB1205S.025D		250		
WB1205S.030D		300		
WB1205S.040D		400		
WB1205S.015C	4 pcs	150	1270-1570	8 pcs
WB1205S.020C		200		
WB1205S.025C		250		
WB1205S.030C		300		
WB1205S.040C		400		

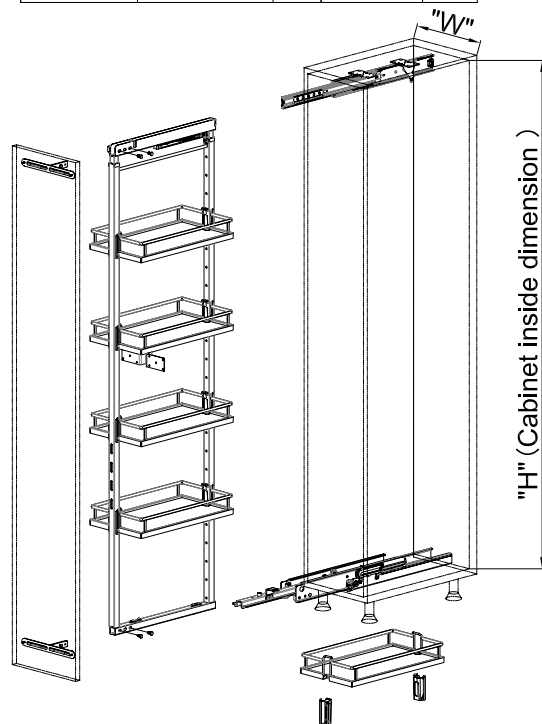



1、Secure top and rear slide.

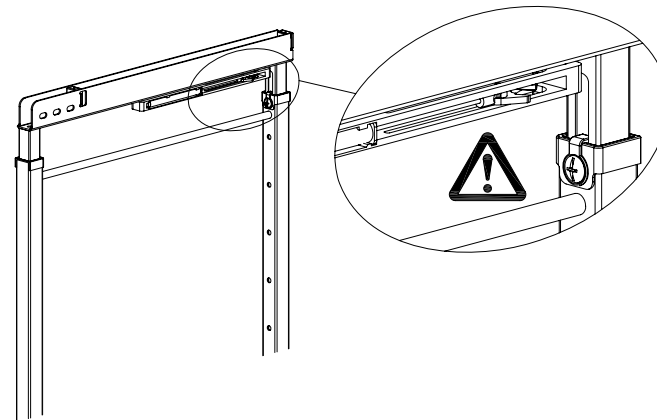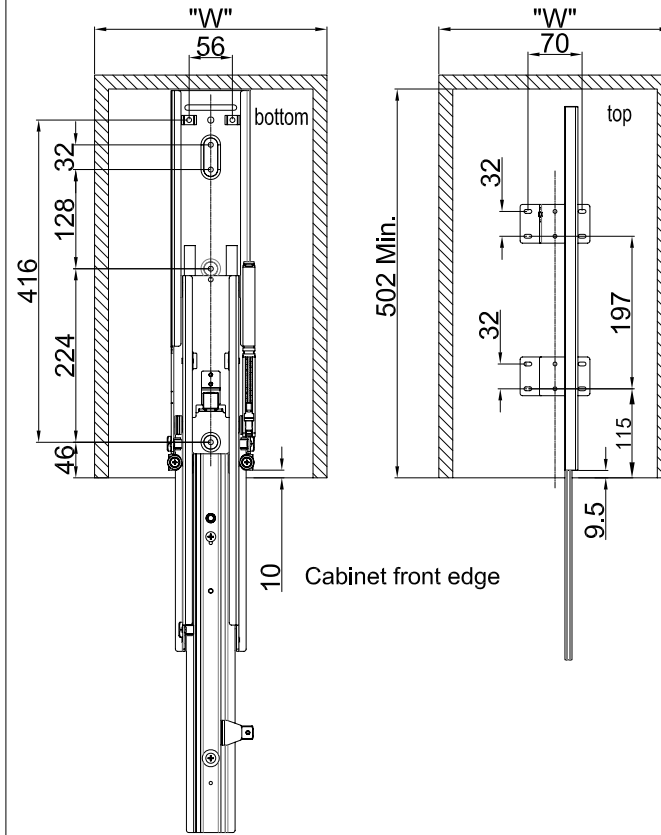

2、Secure using front and rear fixing holes with screws. (Note:the actual size should be based on the thickness of side panel and inner size of cabinet.)

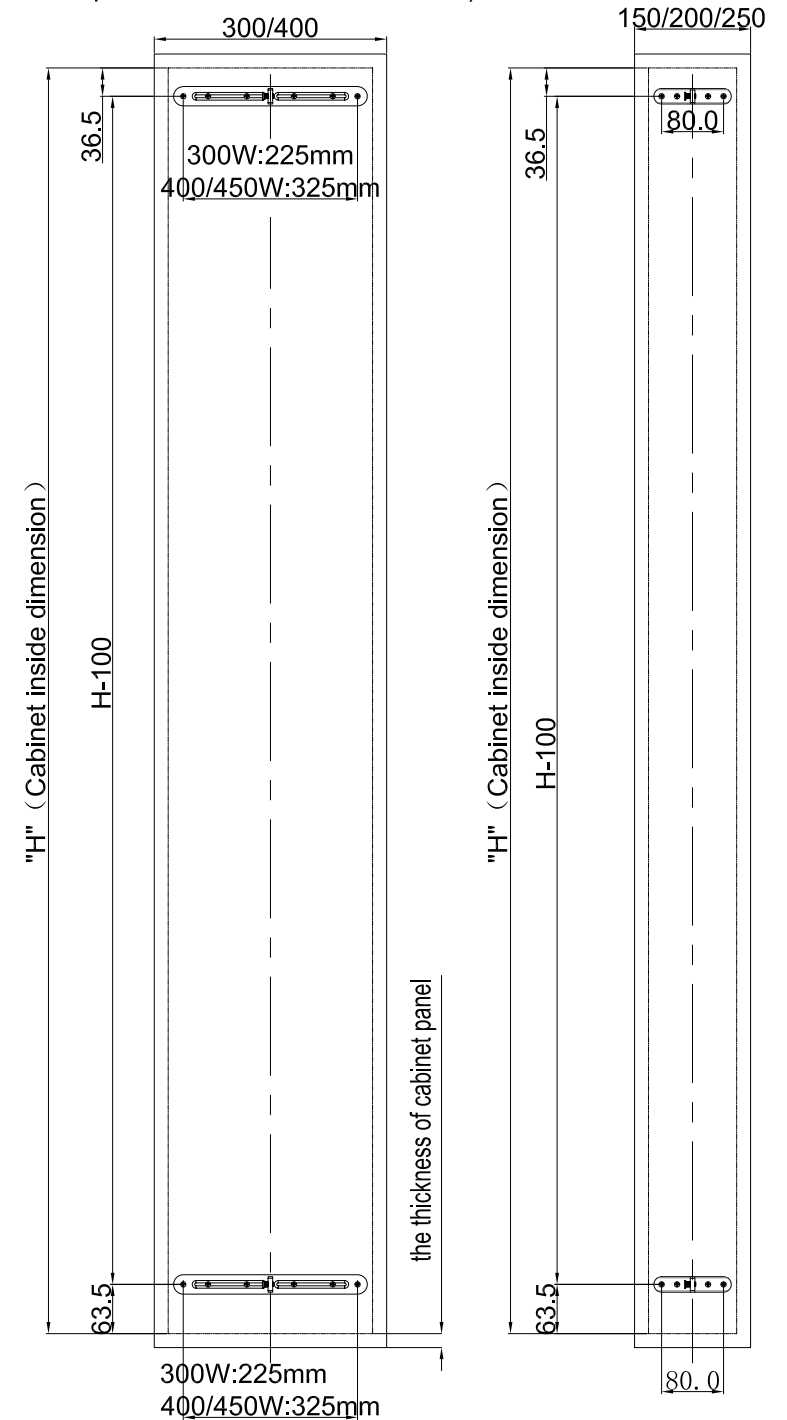



3、Attaching main frame to bottom and top slides.

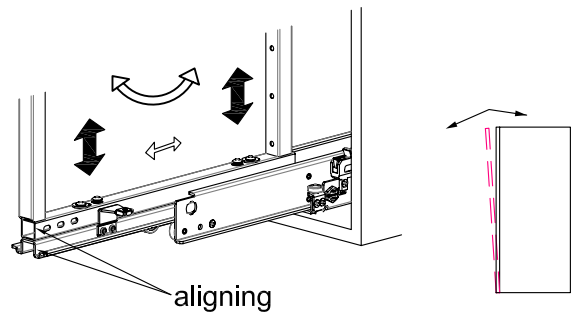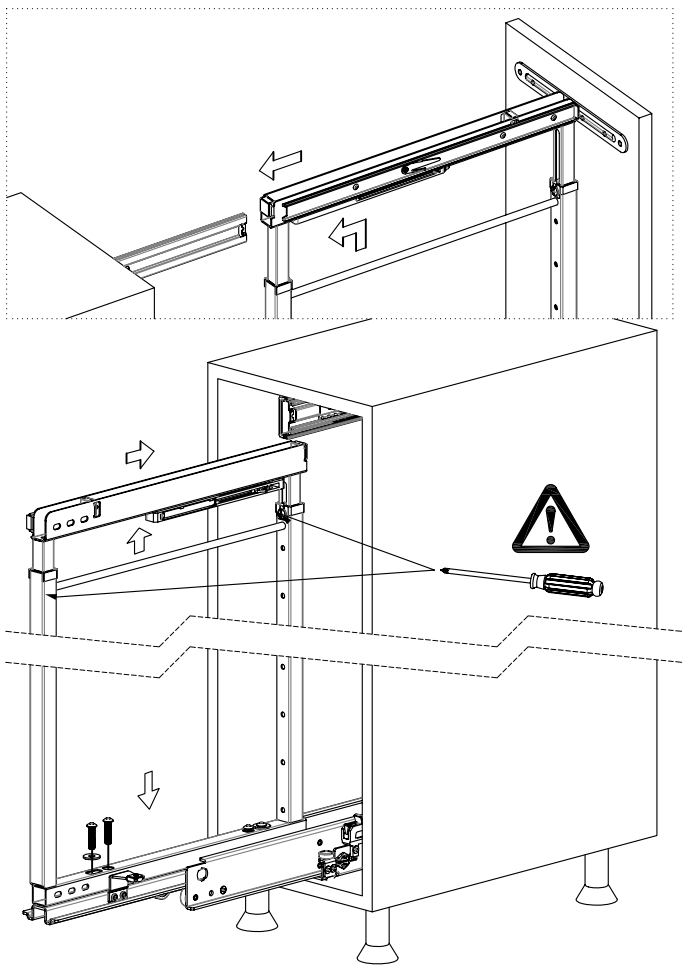



aligning

※ Adjusting closure pitch of cabinet door

4、Attaching the front to main frame, putting the correct location to install the reinforcing plate on cabinet door.

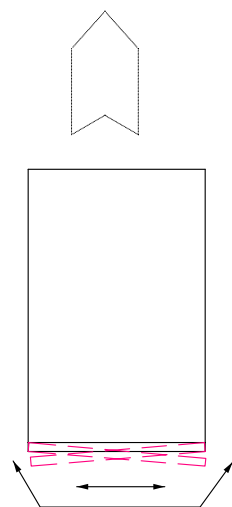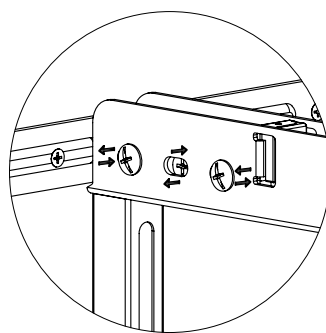

※ Adjusting closure pitch of cabinet door

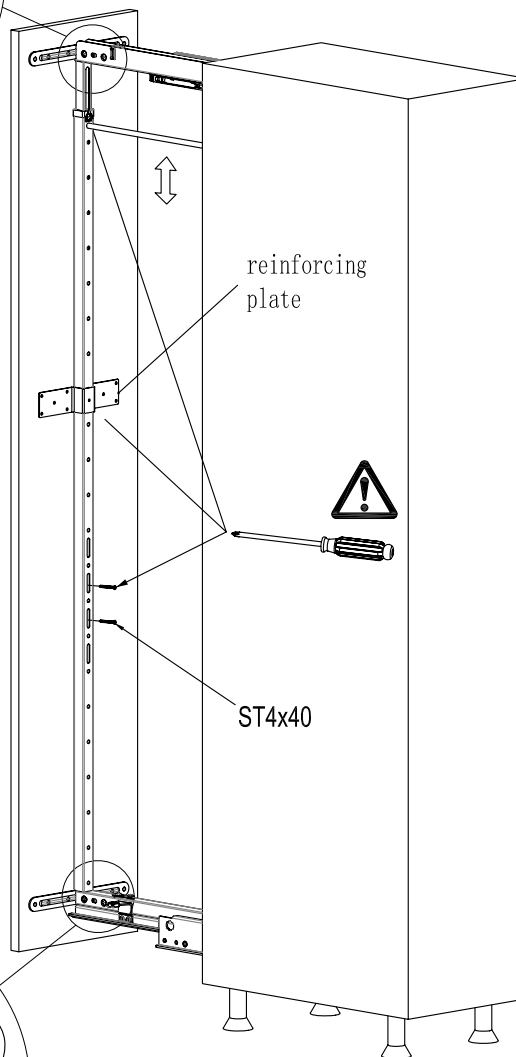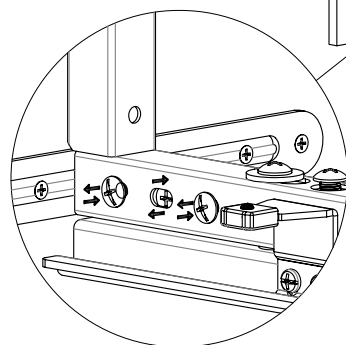

5、Hang the basket onto the main assembly inside the larder. Please refer to the picture. Made Perfect adjustment and then tighten the Adjustment screw.

