
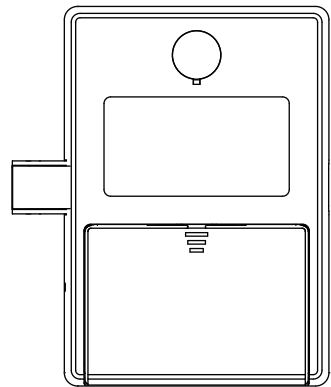


FINGERPRINT CABINET LOCK

USER MANUAL




Feature

1. Biometric fingerprint sensor, sensitive and responsive
2. Programmable master password and user password
3. 100 fingerprints and two passwords for multiple user
4. Widely used in drawer, cabinet or locker etc.
5. E-Key for emergency key and management

1. How to add fingerprint (Max 100 fingerprints)

- Put a finger on sensor, green light with "Beep, Beep", holding, green light with "Beep", then remove(or press * for 2seconds, enter user password or master password and #,enter 4 #)
- Blue light, put a finger on, "Beep" then remove
- Put the finger on, a beep then remove; repeat until green light with "beep,beep" (The fingerprint is registered)
- Blue light, add more new fingerprints

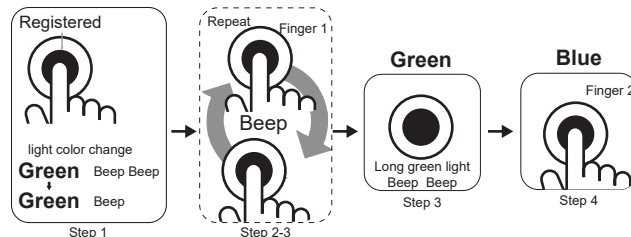

2. How to change user password (Factory Setting: 1-2-3-4)

- Press * for 2 seconds, "beep,beep"
- Enter current user password (or master password) and #, "beep,beep"
- Enter 1#, "beep,beep"
- Enter new use password and #, "Beep, Beep", new use password enabled

* → "1 2 3 4" (Sample) → # → "1 #" → "0 0 0 0" (Sample) → #

3. How to change master password (Factory Setting: 5-4-3-2-1-5)

- Press * for 2 seconds, "beep,beep"
- Enter current master password code and #, "beep,beep"
- Enter 2#, "beep,beep"
- Enter new password and #, "Beep, Beep", new master password enabled

* → "5 4 3 2 1 5" (Sample) → # → "2 #" → "1 1 1 1" (Sample) → #

4. How to unlock

1. Password
→Enter user password or master password and #, "beep,beep", unlocked
→Pull door open

"0 0 0 0" (Sample) → #


2. Fingerprint

- Put any registered fingerprint, "beep", holding, green light then "beep beep", unlocked
- Pull door open

How to initialize the lock

- Insert E-Key
- Enter 11#, "beep,beep",system initialized


Note: System initialized, all fingerprints deleted, user password: 1-2-3-4, master password: 5-4-3-2-1-5



Other Function

UKey

- 1.Insert E-Key
- 2.Pull the door open




2. Low Battery Warning

- 1.If "Beep Beep ..." 6 sounds after door opened , it indicates low battery then change new battery in time
2. Note: Use 3XAAA alkaline battery, not take Carbon battery


3. Outer Power Supply

When low battery, can connect power bank or mobile plug for outer power supply
After unlocked, change the battery immediately

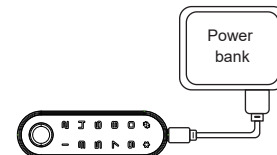

4. How to set mode

- Insert E-Key
- Enter 44#1#, automatic mode enabled
- Enter 44#2#, manual mode enabled
- Enter 44#3#, public mode enabled




5. How to lock


1. Individual Automatic Mode
→Push the door closed, door locks automatically
2. Individual Manual Mode
→Push the door closed
→Enter #, latch comes out, locked
3. Public Mode
→Push the door closed
→Enter any password and #, "beep,beep"
→Latch comes out, locked

Installation Instructions

1. Put the installation drawing on the door, approx. 45mm between the door frame and center hole (Picture 1), then drill the hole

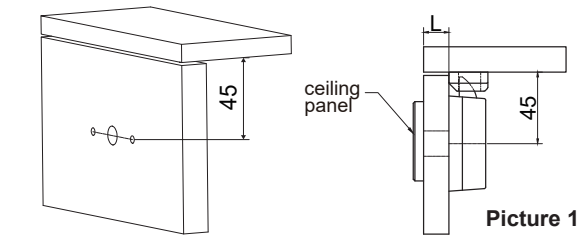

wire connection

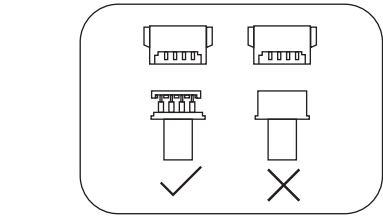

2. Install the front panel and lock body

2.1) All-in-One installation


Wire goes through the center hole and connect lock body, (Tide up the wire not crush), fix the panel and lock body by screw M4X25

2.2) Separation installation

Wire goes through the center hole and fix the front panel by screw M4X22 and washer, then connect the lock body, (Tide up the wire not crush), fix lock body by screw ST3.5X18

3. Fix the striking plate by screw ST3.5X18(Make sure latch works well)


All-in-one installation—Chart ①

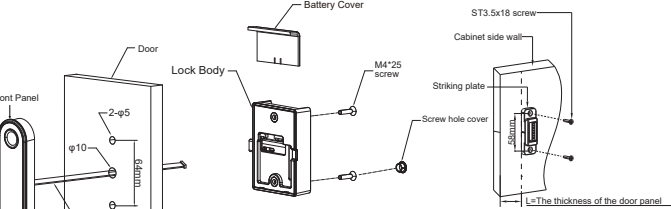

Picture 2

①	Door Thickness(mm)	Cross countersunk Screw
1	14mm~18mm	M4X25
2	19mm~23mm	M4X30


Separate installation②

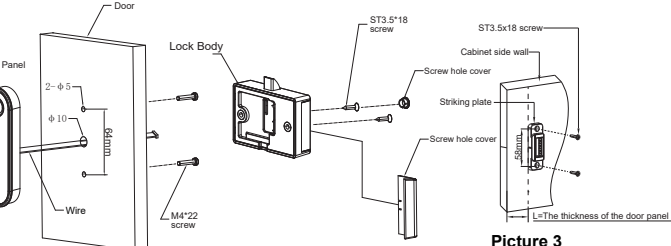

Picture 2

②	Door Thickness(mm)	Phillips pan head Screw
1	14mm~16mm	M4X20
2	16mm~18mm	M4X22
3	19mm~21mm	M4X25

INSTALLATION DRAWING

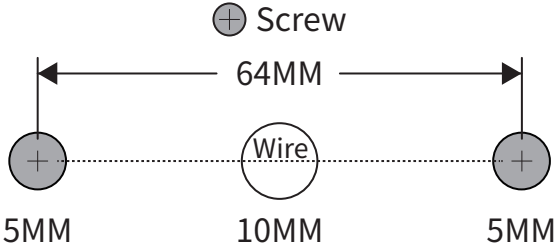

Follow the drawing to drill the hole

COMPONENT

